



Using RTUdiag with Windows 10

1 Introduction


Because of an update to Windows 10, RTUdiag does not run properly by default. If you run RTUdiag and see the following:

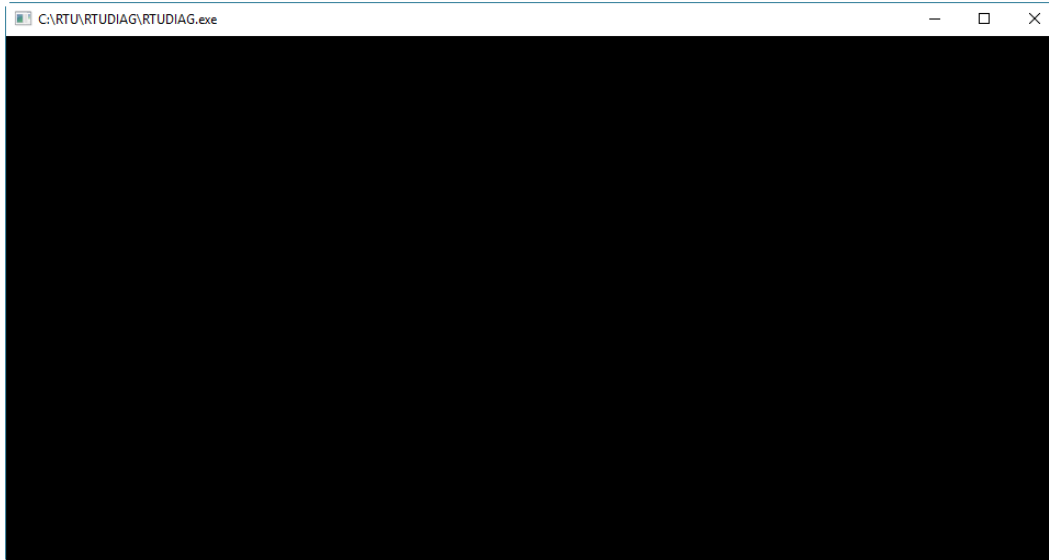


Click on the icon in the upper left corner and select Properties.

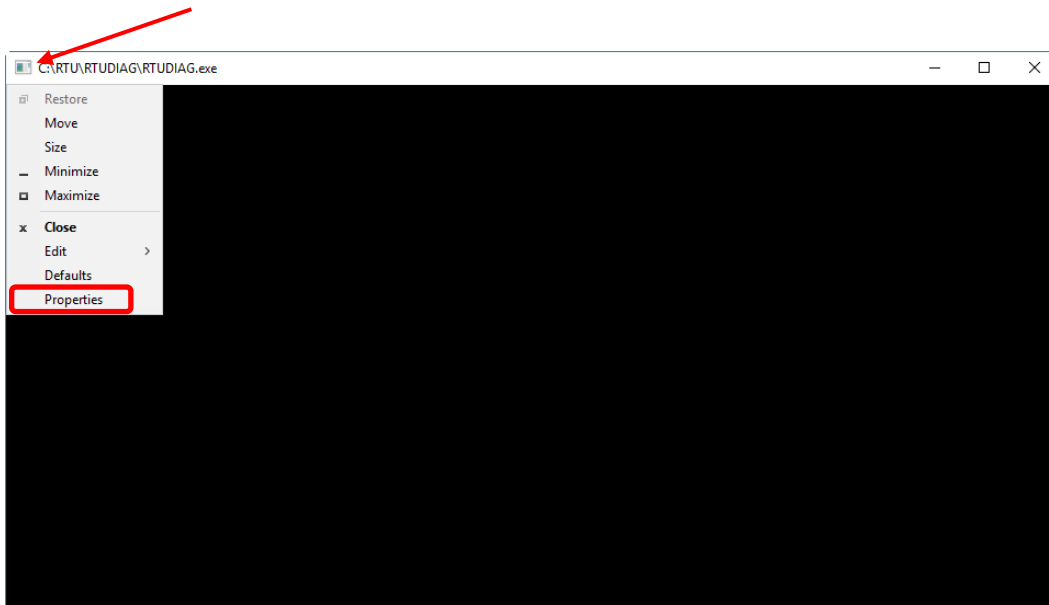

RTUDIAG WINDOWS 10 WORKAROUND

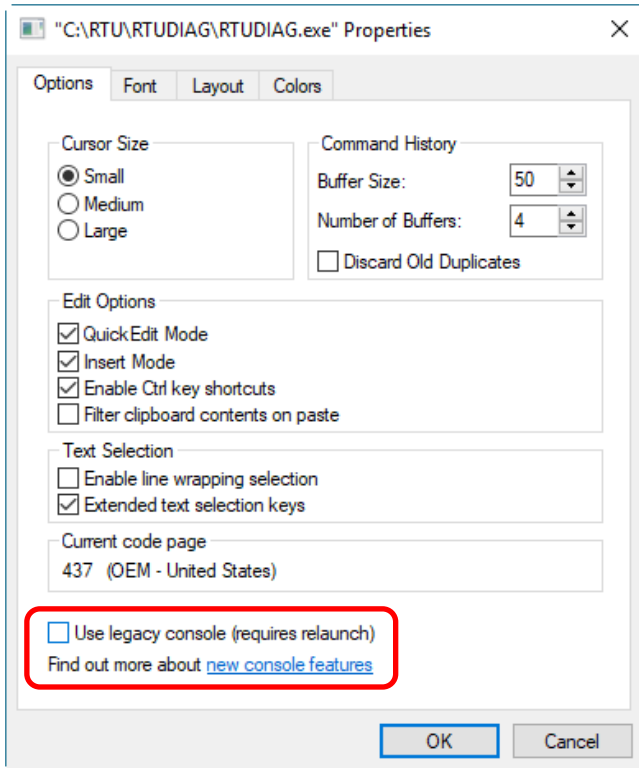

Select the "Use legacy console (requires relaunch)" check box.

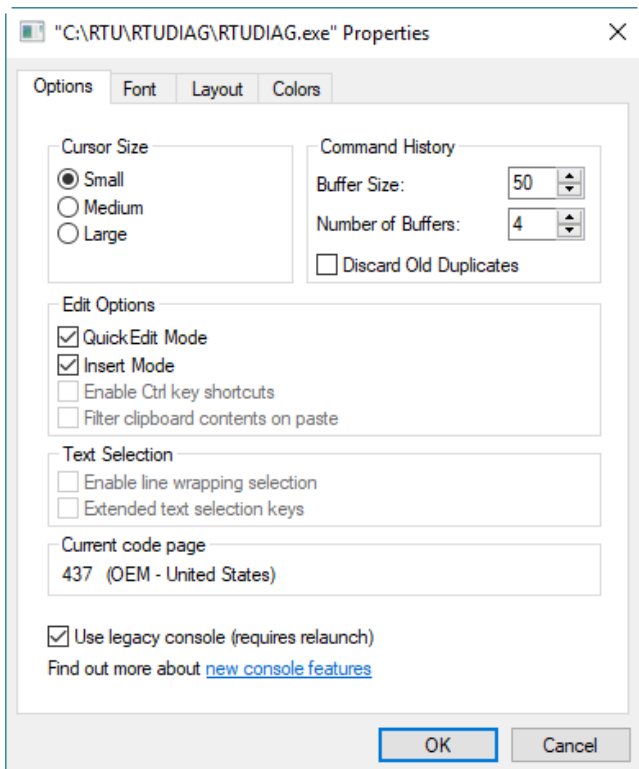

After stopping RTUDIag and restarting it, RTUDIag should operate normally.